

# P - 225 , P - 223 Quick Operation Guide

While holding down the button on the control panel, press one of the corresponding keys shown below to set parameters.

## 1 Song playback

Quick Play

50 Preset Songs (50 Classics) Song number

A#-1 C#0 D#0 F#0 G#0 A#0 C#1 D#1 F#1 G#1 A#1 C#2 D#2 F#2 G#2 A#2 C#3 D#3 F#3 G#3 A#3 C#4 D#4 F#4 G#4 A#4 C#5 D#5 F#5 G#5 A#5 C#6 D#6 F#6 G#6 A#6  
A-1 B-1 C0 D0 E0 F0 G0 A0 B0 C1 D1 E1 F1 G1 A1 B1 C2 D2 E2 F2 G2 A2 B2 C3 D3 E3 F3 G3 A3 B3 C4 D4 E4 F4 G4 A4 B4 C5 D5 E5 F5 G5 A5 B5 C6 D6 E6 F6 G6 A6 B6 C7

### 50 Preset Songs (50 Classics) Song number / Song name

1 Canon D dur	11 Salut d'amour op.12	21 Prelude (Wohltemperierte Klavier I No.1)	31 Etude op.10-3 "Chanson de l'adieu"	41 Humoresque
2 Air On the G String	12 From the New World	22 Menuett G dur BWV Anh.114	32 Etude op.10-12 "Revolutionary"	42 Arietta
3 Jesus, Joy of Man's Desiring	13 Sicilienne	23 Piano Sonate No.15 K.545 1st mov.	33 Valse op.64-1 "Petit chien"	43 Tango (España)
4 Twinkle, Twinkle, Little Star	14 Clair de lune	24 Turkish March	34 Nocturne op.9-2	44 The Entertainer
5 Piano Sonate op.31-2 "Tempest" 3rd mov.	15 Jupiter (The Planets)	25 Piano Sonate op.13 "Pathétique" 2nd mov.	35 Nocturne KK4a-16/BI 49 [Posth.]	45 Maple Leaf Rag
6 Ode to Joy	16 Menuett (Eine kleine Nachtmusik K.525)	26 Für Elise	36 Träumerei	46 La Fille aux Cheveux de Lin
7 Wiegenlied op.98-2	17 Menuett G dur	27 Piano Sonate op.27-2 "Mondschein" 1st mov.	37 Barcarolle	47 Arabesque No.1
8 Grande Valse Brillante	18 Marcia alla Turca	28 Impromptu op.90-2	38 La prière d'une Vierge	48 Cakewalk
9 Polonaise op.53 "Héroïque"	19 Piano Concerto No.1 op.11 2nd mov.	29 Frühlingslied op.62-6	39 Liebesträume No.3	49 Je te veux
10 La Campanella	20 The Nutcracker Medley	30 Fantaisie-Impromptu	40 Blumenlied	50 Gymnopédies No.1

## 2 Voice settings

Reverb Type

Reverb Depth

VRM Lite

Stereophonic Optimizer

Duo Type

Balance between Voice 1 and Voice 2

Octave Setting

Touch Sensitivity

A#-1 C#0 D#0 F#0 G#0 A#0 C#1 D#1 F#1 G#1 A#1 C#2 D#2 F#2 G#2 A#2 C#3 D#3 F#3 G#3 A#3 C#4 D#4 F#4 G#4 A#4 C#5 D#5 F#5 G#5 A#5 C#6 D#6 F#6 G#6 A#6  
A-1 B-1 C0 D0 E0 F0 G0 A0 B0 C1 D1 E1 F1 G1 A1 B1 C2 D2 E2 F2 G2 A2 B2 C3 D3 E3 F3 G3 A3 B3 C4 D4 E4 F4 G4 A4 B4 C5 D5 E5 F5 G5 A5 B5 C6 D6 E6 F6 G6 A6 B6 C7

# P - 2 2 5 , P - 2 2 3 Quick Operation Guide

## 3 Metronome settings

**Voice confirmation of current Tempo value (In English)**

**Metronome Tempo**

**Metronome Beat**

**Metronome Volume**

METRONOME

A#-1 C#0 D#0 F#0 G#0 A#0 C#1 D#1 F#1 G#1 A#1 C#2 D#2 F#2 G#2 A#2 C#3 D#3 F#3 G#3 A#3 C#4 D#4 F#4 G#4 A#4 C#5 D#5 F#5 G#5 A#5 C#6 D#6 F#6 G#6 A#6 C7

1 2 3 4 5 6 7 8 9 0  
10 steps down 10 steps up  
Default tempo  
No beat 2 3 4 5 6  
1 step down 1 step up  
Default value

## 4 Rhythm settings

**Voice confirmation of current Tempo value (In English)**

**Bass, Intro/Ending**

**Rhythm Tempo**

**Rhythm**

**Rhythm Volume**

RHYTHM

A#-1 C#0 D#0 F#0 G#0 A#0 C#1 D#1 F#1 G#1 A#1 C#2 D#2 F#2 G#2 A#2 C#3 D#3 F#3 G#3 A#3 C#4 D#4 F#4 G#4 A#4 C#5 D#5 F#5 G#5 A#5 C#6 D#6 F#6 G#6 A#6 C7

Bass Off Bass On Intro Off Intro On Ending Off Ending On  
1 2 3 4 5 6 7 8 9 0  
10 steps down 10 steps up  
Default tempo  
8Beat 16Beat Shuffle1 Shuffle2 Shuffle3 Gospel  
8BeatBallad  
6-8SlowRock FastJazz SlowJazz Swing JazzWaltz  
Samba BossaNova Rumba Salsa KidsPop 6-8March ChristmasSwing Christmas3-4  
1 step down 1 step up  
Default value

## 5 Other settings

**Voice confirmation of firmware version**

**Operation Confirmation Sounds**

**Auto Power Off**

**Tuning**

**Bluetooth**

**IAC**

**Transpose**

**Local Control**

**Program Change**

**Control Change**

**Sound Boost**

**Built-in Speaker**

**AUX OUT Volume**

**Audio Loopback**

**Wall EQ**

METRONOME

RHYTHM

A#-1 C#0 D#0 F#0 G#0 A#0 C#1 D#1 F#1 G#1 A#1 C#2 D#2 F#2 G#2 A#2 C#3 D#3 F#3 G#3 A#3 C#4 D#4 F#4 G#4 A#4 C#5 D#5 F#5 G#5 A#5 C#6 D#6 F#6 G#6 A#6 C7

Off On (Default)  
Disable Enable (Default)  
440.0 Hz (Default) 442.0 Hz  
Off On (Default)  
Off On (Default) Default value  
-6 -5 -4 -3 -2 +1 +2 +3 +4 +5 +6  
On/Off  
On/Off 1 step down 1 step up  
Off Ch 1 Ch 1+2 ALL (default)  
Off (Default) Output  
Speaker  
Off On  
Auto (Default) Variable (Default) Fixed  
Off On (Default) On (Default)  
Off (Default)